

Slimlok III Installation - Poster Frame, Notice Board, Menu Case, Illuminated Menu Case

Suggest 2 persons to fit large frames

1 Select your desired area for the frame. Position the first fixing point to match the hole in the rear of the frame nearest to the lock.

Rear of frame (Illuminated Menu Case shown)

15mm diameter clearance hole.

If fitting an Illuminated Menu Case for exterior use, as shown, the connector must feed through the external wall unless an extension lead is used.

2

Fix through one place

Mark fixing point

Quarter turn the key anti-clockwise to unlock.

Spirit Level

Mark fixing points

Unlock, open the door & fit one screw.
Level the frame & mark the three remaining fixing points.

3

Drill & rawplug

Shut the door & allow the frame to rotate at the fixed point. Drill & rawplug as necessary, where previously marked.

Do not attempt to drill the wall through the frame.

Drill & rawplug

4

Open the door & fit the frame through the three remaining fixing points.

**- Illuminated Menu Case only -
Wiring for outdoor use (12 volt)**

Power supply transformer. Indoor use ONLY!!

1,8 metres

3 metres long

3 metres standard

Waterproof connection for outdoor use

Menu Case

1

Unlock & open the door. Lock out the stays top & bottom. (If fitted).

Lock out stays. (If fitted).

Typical Display Changing Instructions

2i Poster Frame

Position the poster under the poster clips.

2ii Noticeboard and Menu Cases

Use the magnetic pins to hold your displays in position.

Menus & leaflets should be laminated for long term use & to best resist condensation.

3 Release the stays (If fitted) to close the door.

Release stays. (If fitted).

4 Quarter turn the key clockwise to lock.

Copyright 07-12 S-0120-01